

							
	Bubble Motion-Activated Diffuser 泡泡迷你體感芳香噴霧器	Pebble Diffuser 鵝卵石紋芳香噴霧器	Petal Diffuser 2.0 花瓣型芳香噴霧器	Hygge Diffuser 舒樂芳香噴霧器	Laluz Diffuser 迷你意馨芳香噴霧器	Train Diffuser 小火車芳香噴霧器	Wombat Diffuser 袋熊芳香噴霧器
Product Dimensions	75.5mm(D) x 46mm(H)	130mm(L) x 85mm(W) x 135mm(H)	135mm(D) x 121mm(H)	150mm(D) x 122mm(H)	90mm(D) x 190mm(H)	Train Diffuser: 219.5mm(L) x 108mm(W) x 147.7mm(H) Train Diffuser with Track: 300mm(L) x 116.5mm(W) x 156mm(H)	220mm(L) x 64mm(W) x 107mm(H)
Power Supply Type	USB Cable	Certified AC Adapter	Certified AC Adapter	Certified AC Adapter	Certified AC Adapter	USB Cable	Certified AC Adapter
Water Capacity	No water required	100 mL	240 mL	150 mL	120 mL	120 mL	150 mL
Maximum Suitable Room Size	110 sq.ft.	270 sq.ft.	330 sq.ft.	300 sq.ft.	330 sq.ft.	270 sq.ft.	270 sq.ft.
Motion Sensing Range	4 meters and 120 degrees	-	-	-	-	-	-
Maximum Continuous Operation Time	Up to 12 hours	5 hours	6 hours	5 hours	High Mist Mode: 4 hours Low Mist Mode: 8 hours	6 hours	8 hours
Max. Intermittent Operation Time (5 minutes on/5 minutes off)	-	10 hours	12 hours	10 hours	-	12 hours	16 hours
Timer Settings	-	2 hours/5 hours/10 hours	2 hours/6 hours/12 hours	2 hours/5 hours/Timer Off-On	1 hour/2 hours/4 hours/Timer Off-On	3 hours/6 hours/12 hours	4 hours/8 hours/16 hours
Light Options	-	Cyan, white, purple, warm white, blue or lightless	Warm luminous or lightless	Bright warm, dim warm, candlelight effect or lightless	Dim, bright warm, lavender and lightless options	Bright warm, dim warm, or lightness	Bright warm, dim warm, or lightless
Sound	-	-	-	-	-	Train whistle Sound	Piano Lullaby / Real Natural Bush / Ocean Sound Meditation / Kookaburras and Birds / Music Off
Automatic Safety Shut-off	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Remarks	Do not use high-viscosity or thick essential oils such as Sandalwood, Vetiver, or Myrrh to prevent clogging the device.	Ensure water level does not exceed the maximum mark when using.	Ensure water level does not exceed the maximum mark when using.	Ensure water level does not exceed the maximum mark when using.	Ensure water level does not exceed the maximum mark when using.	Ensure water level does not exceed the maximum mark when using.	Ensure water level does not exceed the maximum mark when using.

* For details on usage, cleaning and warranty, please refer to the product manual.