

dōTERRA® Lumist™
Motion-Sensing Diffuser
Instruction Manual
v1

Light

Indicator Light

Mist Plate

Motion Sensor

Bottle Screw-thread

Oil Tank

Power Button

 
USB Type-C socket

USB Cable

USB Type-C Connector




1. Turn the diffuser upside down and insert a 5 mL or 15 mL essential oil bottle into the Bottle Screw-thread. Turn counter-clockwise to tighten. Note: Do not remove the orifice reducer prior to inserting bottle.

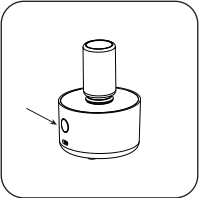

2. Turn the diffuser upright. Press the Power Button to start the diffuser.

 Power Button

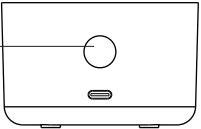

1st press: Normal Mode, Light on
The diffuser will spray 7 seconds, then hibernate for 3 minutes. After 3 minutes, each time the Motion Sensor detects movement, the diffuser will spray 5 seconds, then hibernate for 3 minutes.

2nd press: High Mode, Light on
The Light flashes 3 times to signal High Mode selection, the diffuser will spray 10 seconds, then hibernate for 3 minutes. After 3 minutes, each time the Motion Sensor detects movement, the diffuser will spray 7 seconds, then hibernate for 3 minutes.

3rd press: Turn off the diffuser, Light off.

Dark Mode

During operation, double click the Power Button to turn off the Light completely. The selected Mode setting is retained. The diffuser will continue to spray based on the selected Mode setting with the Light turned off. Double click Power Button again to turn off the Dark Mode.

During Dark Mode, when change from Normal Mode to High Mode, the Light flashes 3 times to signal High Mode selection and then turns off.

Battery Recharge

Battery Drained Protection: When the battery power becomes too low, the Indicator Light flashes red five times and the diffuser will automatically shut off completely.

- Plug the provided USB cable into the USB Type-C Socket and connect to a power source.
- The Indicator Light turns red while charging and turns off when fully charged.
- Run time for each full recharge is approximately 12 hours - based on activated spray time.
- Charging time is approximately 4 hours from drained to full charge with 1Amp Power Adapter.

Important: As with most lithium-ion batteries, the device battery life will gradually decrease over time. After about 300 charge cycles, the device battery life will decrease to about 80 percent compared to the battery on a new device. This is normal and does not represent an issue with the device or with the battery.

Features

- Dimensions: DIA 72.5 x 46.2 H mm / DIA 2.85 x 1.82 H in
- Material: PP, Aluminum
- Suggested Room Size: 10 sq.m / 110 sq. ft
- Motion Sensor Range: 4 meter / 13 feet, 120 degree field of view
- Power Source: DC 5V 1A and 3.7V 800mAh battery

Cautions

- It is normal for mist volume to vary with the type of essential oil used.
- Use of chemical fragrances, spices, or impure essential oils may cause product damage.
- Essential oils with high viscosity, including essential oils that contain Fractionated Coconut Oil, will cause the diffuser not to mist properly. If the diffuser has difficulty misting the essential oil, follow "Cleaning and Maintenance" to clean away the essential oil from the Oil Tank.
- Leave the essential oil bottle in the diffuser until completely dispensed and the diffuser stops spraying. Changing the essential oil bottle before this will cause the oil to spill.
- When essential oil is inside the Oil Tank, essential oil may leak when the diffuser is stored or placed at an angle or turned upside down, which will cause product damage.

Safety

Please follow the safety rules below while using the product:

 
- Only use the diffuser for the intended purpose.
- Use only the USB Cable included in the package.
- When storing the diffuser or relocating it, turn the power off, unplug the device, empty the Oil Tank, and clean the device.
- Turn off the diffuser and unplug immediately if there is any smoke or burning smell.
- Do not fill essential oil directly into the Oil Tank to avoid spillage. Always insert a 5 mL or 15 mL essential oil bottle into the Bottle Screw-thread and tighten securely.
- Place the diffuser on a flat and solid surface instead of uneven and/or unstable ones like carpets or rugs etc.
- Do not move the diffuser during its operation.
- Pull the USB plug instead of the cable to unplug.
- Do not use this diffuser near water.
- Do not place the diffuser in direct sunlight or close to a refrigerator, a fan, or other hot environment.
- This diffuser should not be operated by children unless supervised by an adult.
- This diffuser is not for medical purposes.

DO NOT inhale the mist directly from the diffuser.

KEEP OUT OF REACH OF CHILDREN

Cleaning and Maintenance

Clean the Mist Plate with a cotton swab and warm water at least twice a week.

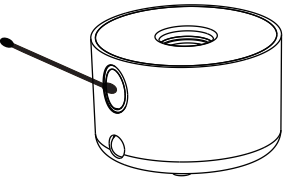

Clean the diffuser each time a bottle of essential oil is used up. Before cleaning, turn the diffuser off and unplug the USB Cable.



1. Keep the diffuser upright. Turn counter-clockwise to remove the essential oil bottle.



 
2. If there is essential oil left inside the Oil Tank, carefully empty the essential oil from the opposite side of the Mist Plate.




3. Fill an empty essential oil bottle with 2 mL/0.07 fl. oz of 3 parts white vinegar and 7 parts water.



4. Turn the diffuser upside down and insert the 5 mL or 15 mL essential oil bottle with the suggested cleaning solution into the Bottle Screw-thread. Turn counter-clockwise to tighten.

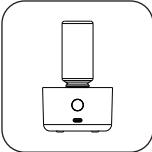

 5. Turn the diffuser upright. Place the diffuser in an open space with good air flow and press the Power Button to set to High Mode and let the diffuser operate until it no longer sprays mist.

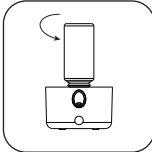

6. Keep the diffuser upright. Turn counter-clockwise to remove the empty essential oil bottle.



Warning:

- Use of corrosive or harsh chemicals may cause damage. Essential oil should not come in contact with the exterior surface of the unit.
- Clean the diffuser in open space with good air flow and away from hot environment or heat sources.

Troubleshooting

Status	Cause(s)	Solution(s)
Startup Failure/ Early Shutdown	1. Improper power cable connection. 2. Battery not charged	1. Unplug the USB Cable and reset carefully. 2. Charge the battery.
No mist or abnormal mist	1. Essential oil of high viscosity used, including essential oils that contain Fractionated Coconut Oil.	1. Please follow the instructions on cleaning and maintenance to clean the essential oil from the Oil Tank.
	1. Oil contamination on Mist Plate.	1. Please follow the instructions on cleaning and maintenance.
	1. Motion sensor detects no motion movement.	1. Ensure motion is within 4 meter / 13 feet range and 120 degree field of view.
Oil Leakage	1. Essential oil bottle not tightened securely. 2. Essential oil is left inside the Oil Tank and diffuser stored at angle or turned upside down.	1. Secure the essential oil bottle tightly. 2. Follow the instructions on cleaning and maintenance to clean the essential oil from the Oil Tank.

Product Warranty

dōTERRA® One (1) Year Limited Warranty. dōTERRA's warranty obligation for this product is limited to the terms set forth below: dōTERRA International, LLC ("dōTERRA") warrants this diffuser against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original end-user purchaser ("Warranty Period") provided the operation and maintenance strictly follow the instruction manual. If a defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law, dōTERRA will either (1) ship a new replacement diffuser to original end-user, or (2) issue a refund based on the dōTERRA 30-day return policy. When a replacement or refund is given, the diffuser for which the replacement or refund is provided must be returned to dōTERRA prior to replacement or refund and becomes dōTERRA's property. Please call 1-800-411-8151 for more information.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. This appliance can be used by children ages 8 years and above and persons with reduced physical, sensory or mental capabilities if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision.

This device complies with part 18 of the FCC Rules

(a) The interference potential of device or system:

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

(b) Maintenance of the system:

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

(c) Simple measures that can be taken by the user to correct interference:

NOTE: This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

model number: DT054W
Manufactured for: dōTERRA INTL, LLC
389 S 1300 W, Pleasant Grove, UT 84062 USA